

The logo consists of the text "GP2040-CE" in a stylized, white, hand-painted font. The letters are slightly irregular and have a dynamic feel, suggesting movement or performance.

GP2040-CE.INFO

SHORTCUTS

Web-config:

Hold **[S2]** while plugging in the controller and then go to **192.168.7.1** on your computer browser.

Input Modes:

Hold **[P1]** while plugging in for PS3/DINPUT

Hold **[P2]** while plugging in for PS4

Hold **[K1]** while plugging in for Nintendo Switch

Hold **[K2]** while plugging in for XINPUT

Hold **[K3]** while plugging in for HID-Keyboard

D-Pad Modes:

[S1] + [S2] + [DOWN] = D-Pad

[S1] + [S2] + [LEFT] = Emulate left analog stick

[S1] + [S2] + [RIGHT] = Emulate right analog stick


SOC'D Modes:

[S2] + [A1] + [UP] = Up Priority mode

[S2] + [A1] + [LEFT] = Last Input Priority (Last Win)

[S2] + [A1] + [DOWN] = Neutral mode

Find more at gp2040-ce.info/#gp2040-shortcuts

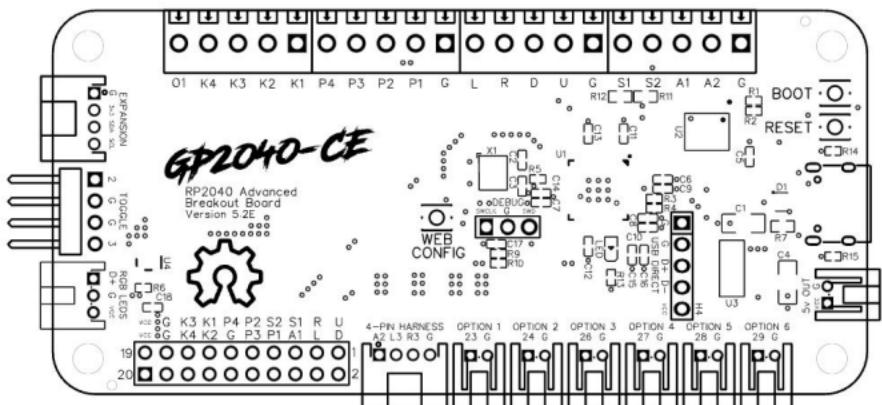

Main Button Inputs

	GP2040	XInput	Switch	PS3	DInput	Arcade	Keyboard
B1	A	B	Cross	2	K1	Left Shift	
B2	B	A	Circle	3	K2	Z	
B3	X	Y	Square	1	P1	Left Control	
B4	Y	X	Triangle	4	P2	Left Alt	
L1	LB	L	L1	5	P4	C	
R1	RB	R	R1	6	P3	Spacebar	
L2	LT	ZL	L2	7	K4	V	
R2	RT	ZR	R2	8	K3	X	
S1	Back	Minus	Select	9	Coin	5	
S2	Start	Plus	Start	10	Start	1	
L3	LS	LS	L3	11	LS	Equal	
R3	RS	RS	R3	12	RS	Minus	
A1	Guide	Home	-	13	-	9	
A2	-	Capture	-	14	-	F2	

GPIO Pinout

+5	+5
G	G
05	06
07	08
G	09
10	11
12	13
14	15
16	17
18	19

